

INTRODUCTION


Thank you for buying a CRMX BOX product. This guide is intended to give you a quick start to experience the benefits of CRMX BOX.

We hope that you will enjoy our products and that they will bring benefits and positive experiences.

引言

感谢您购买LumenRadio BOX产品。本指南旨在帮助您快速入门，体验CRMX BOX的诸多优势。

我们希望您会喜欢我们的产品，并希望它们能为您带来益处和积极的体验。

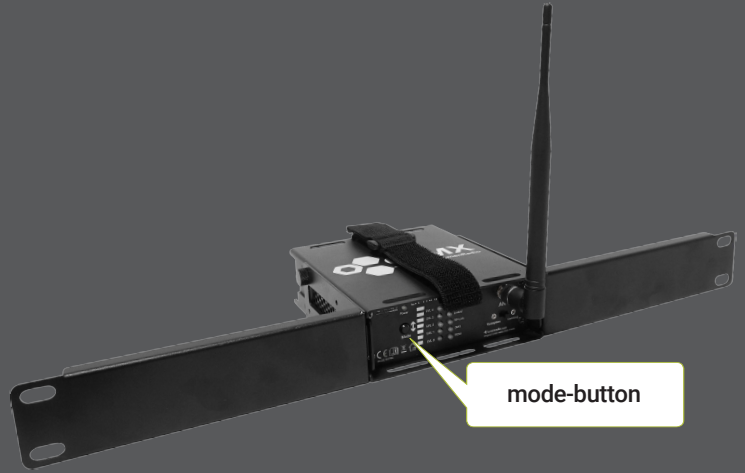

CRMX CONTROL PANEL CRMX 控制面板

Signal quality indicators
Transmitter:
Not used/All off.
Receiver:
LVL 5 = 100% signal quality.
LVL 4 = 80% signal quality.
LVL 3 = 60% signal quality.
LVL 2 = 40% signal quality.
LVL 1 = 20% signal quality.
LVL 0 = Link problem.

信号质量指标
发射器:
未使用/全部关闭。
接收器:
LVL 5 = 信号质量100%。
LVL 4 = 信号质量80%。
LVL 3 = 信号质量60%。
LVL 2 = 信号质量为40%。
LVL 1 = 信号质量20%。
LVL 0 = 信号质量差。

Power - Light on when powered
通电时灯亮

Mode - button
按键

Antenna
天线

Status:
On = Normal operation.
Fast flashing = Linking.
Slow flashing = Unlinking.

RF-Link:
On = Linked with RF signal.
Off = Unlinked.
Fast flashing = Linking or linked, but with lost RF signal.
DMX: On when DMX is present.
RDM: Flashes to RDM activity.

Status状态指示灯:
开 = 正常运行。
快速闪烁 = 正在连接
缓慢闪烁 = 取消连接。


RF-Link:
开 = 与射频信号相关联。
关 = 未连接。
快速闪烁 = 正在连接或已连接，但射频信号丢失。
DMX: 当DMX存在时亮起。
RDM: 闪烁至RDM活动状态。

Switching
Reception/transmission
切换 接收/发射


CRMX OPERATION INDICATIONS CRMX 操作指示

发射模式切换到接收模式 Switch the transmission mode to the reception mode

1. 先将模式从Sending拨到Reception
2. 连续摁5下mode，第6下长按不松手，直至Status从快速闪烁（TX模式）到慢速闪烁（RX模式）
3. 然后再连续摁5下mode，第6下长按不松手，直至所有灯熄灭，此时已是接收状态

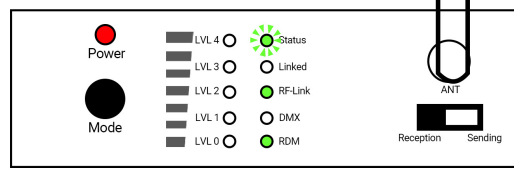


3. 然后再连续摁5下mode，第6下长按不松手，直至所有灯熄灭，此时已是接收状态
3. Then press "mode" five times in succession, and press and hold it for the sixth time until all lights turn off. At this point, it is already in the receiving state

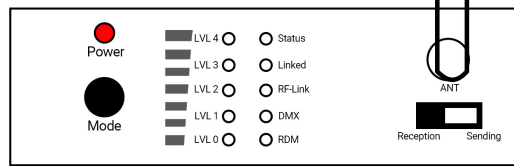


接收模式切换到发射模式 Switch the receiving mode to the transmitting mode

1. 先将模式从Reception拨到Sending
2. 连续摁5下mode，第6下长按不松手，Status会亮起并快速闪烁
3. 然后再连续摁5下mode，第6下长按不松手，直至所有灯熄灭后又亮起三颗灯（较长时间）

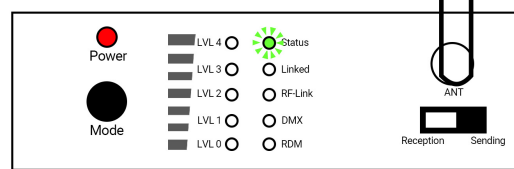


3. 然后再连续摁5下mode，第6下长按不松手，直至所有灯熄灭后又亮起三颗灯（较长时间）
3. Then press "mode" five times in succession, and press and hold it for the sixth time. Until all lights are extinguished, three lights will illuminate for a longer period of time

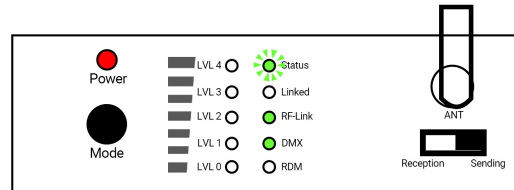


Status闪烁代表未与信号连接上
The Status indicator flashing means that it is not connected to the signal


按1下Mode，自动寻找信号中（闪烁）
Press "mode" once to automatically search for signals (flashing)

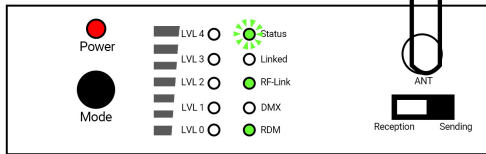

没有读取到信号时
When no signal is detected

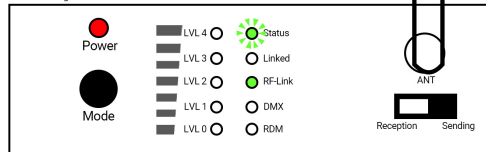

读取到信号，已连接时
Upon receiving the signal, it is already connected

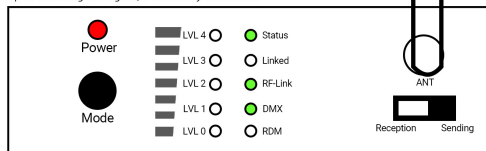

MULTIPLE FIXED INSTALLATION METHODS TO CHOOSE FROM
多种固定安装方式可选择



SIGNAL/POWER CONNECTION
信号/电源连接

